Lascar Electronics UK

Telephone: +44 (0) 1794 884 567 Email: sales@lascar.co.uk



Lascar Electronics US

Telephone: +1 (814) 835-0621

Email: us-sales@lascarelectronics.com

Lascar Electronics HK

Telephone: +852 2389 6502 Email: saleshk@lascar.com.hk

www.lascarelectronics/data-loggers




Button Functions


The main button is used to control the EL-IOT's functions, some of which also create an audit event that can be viewed using the EasyLog Cloud App or website.





Getting to know your EL-IOT data logger

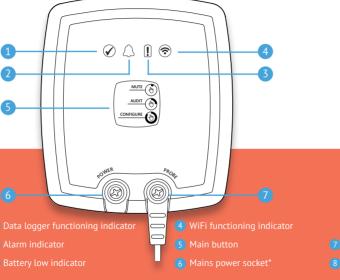

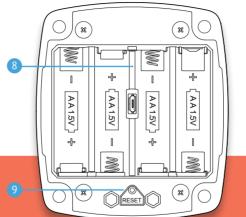

Indicators and Sounder

The EL-IOT has four indicators and a sounder to clearly show its current status. The sounder is active whenever there is an alarm.



Indicator	Flashing	Flashing	<u> </u>	○	Flashing	
Status	Device in operation, no alarms or warnings	Alarm / Memory Full / Calibration Expired	Battery Low	WiFi Active	WiFi set up mode / not set up yet	



WARNING: Failure to follow these safety instructions could result in fire, electrical shock, other injury or damage.

Repairing or modifying

Never attempt to repair or modify this product. Dismantling, may cause damage that is not covered under the warranty. Servicing should only be provided by an approved supplier. If the product has been punctured, or seriously damaged do not use it and return it to an approved supplier.

Only use 1.5V AA alkaline batteries or a genuine EL-IOT power supply to power your EL-IOT data logger. Power supply sold separately.

Disposal and recycling

You must dispose of this product and batteries according to relevant laws and regulations. This product contains electronic components and therefore must be disposed of separately from household waste.

Caution: Do not leave product in direct sunlight. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

EL-IOT

Wireless Cloud-Connected Data Logger



Ouick Start Guide





DESCRIPTION OF THE PARTY.

App Store

40 %O AC

Set up a Cloud Account

EasyLog Cloud account.

- Visit easylogcloud.com ar





Remove the mounting bracket

Slide the mounting bracket upwards to detach it from the El-IOT device.



Remove the back cover

Use a cross-head screwdriver to unscrew the 4 screws that secure the back cover of the device.





Install the batteries

Insert 4 x AA batteries into the battery compartment, taking care to place the batteries in the correct



orientation. The sounder will beep when the batteries

Connecting external sensor probe

If an external sensor probe was supplied with your EL-IOT, fit it to the PROBE socket. The screw must be fully tightened to ensure a good

connection.

This must be done before you connect



Internal sensor

Ø A 1 8

your EL-IOT will automatically use the internal temperature sensor.

If no probe is fitted,

If you subsequently fit a probe, you will need to set the EL-IOT up on the Cloud again, as described in the next section.



configure your EL-IOT.

Sign in to the EasyLog Cloud App on your mobile device. Select "Setup Device" from the burger menu and follow the on-screen instructions to

Once your EL-IOT is connected to your WiFi network and EasyLog account, replace the battery cover and wall mount bracket. Setup is now complete. Install your device in the

Setup Device Device Type: • EL-IOT ☐ WiFi Sensor ___ моте

location you wish to monitor.

You can now view the EL-IOT's data and change settings either in the EasyLog Cloud App or by visiting your account at:

www.easylogcloud.com EasyLog

